

LINK BEARING MAINTENANCE PROCEDURE

Rotate bearings so that grease hole is accessible. Insert needle tip grease applicator and dispense a small amount of grease. Then, brush a small amount of grease onto the face of each bearing before indexing to the next link. This maintenance should be performed every 4-months



**ENLARGED VIEW OF
ROLLER BEARING**

